

NOKIA 9210 Communicator



**SUPPORT GUIDE FOR
IMAGING**

NOKIA

Contents

1. IMAGING APPLICATION	2
1.1 VIEWING AND STORING IMAGES.....	2
1.2 CREATING A NEW ALBUM	3
1.3 MOVING IMAGES TO AND FROM ALBUMS	3
1.4 RENAMING ALBUMS AND IMAGES.....	3
1.5 RECEIVING IMAGES VIA INFRARED FROM A COMPATIBLE DIGITAL CAMERA ...	4
1.6 CONVERTING IMAGES	5
1.7 SENDING IMAGES	5
1.8 TROUBLESHOOTING.....	5

Legal Notice

Copyright © Nokia Mobile Phones 2001. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

1. IMAGING APPLICATION

The Imaging application acts as a file manager for images. With the Imaging application, you can view, delete, rename, copy and move images from one album to another and create your own favourite albums.

With the Imaging application, you can also receive images via infrared (IR) from IrTran-P compatible digital cameras and send them via infrared, mail, or as a fax.

Imaging supports a wide range of image formats, among them JPEG, UPF, TIFF, GIF, BMP, MBM and WBMP.

1.1 VIEWING AND STORING IMAGES

To access the Imaging application, press the Extras button, and open *Imaging*.

You can scroll the view where images are shown as thumbnails. You can select an image for viewing by pressing **Open**.

By default, the imaging application shows the contents of the *Images* folder in the communicator.



If images are stored in albums:

1. Select the album in the Imaging main view and press **Open**. A view of the album contents opens.
2. You can scroll the contents of the album with the Arrows key. To open an image for viewing in the image viewer, press **Open**.
3. Press **Close** to close the Image viewer.
4. Press **Close album** to return to the Imaging main view.



Tip: To open an image located outside the image albums, select *File > Open from* and browse for the image location.

1.2 CREATING A NEW ALBUM

1. Press the Menu key and select *File > New album....* A dialog opens.
2. Define the following: *Name*: name of the album.
3. To save the album in the communicator, press **Create locally**, or To save the album in the memory card, press **Create in mem. card**.

1.3 MOVING IMAGES TO AND FROM ALBUMS

1. Select the image or images with the Arrows key. Use the Space key to select several images.
2. Press the Menu key and first select *Edit > Copy* or *Cut*. (Ctrl+C or Ctrl+X)
3. Press **Close**.
4. Open the target album.
5. Press the Menu key and select *Edit > Paste*. (Ctrl+V)
6. If the target album already contains an image or images with the same name, a Confirmation note appears asking you if you wish to replace the existing image. Choose from the following options:

Replace - The existing image is replaced with the image you are pasting.

Replace all - All existing images are replaced with images of the same name.

Skip - Skips the image and continues the operation.

Cancel - Cancels the whole paste operation.

1.4 RENAMING ALBUMS AND IMAGES

1. Select the image or album with the Arrows key.
2. Press the Menu key and select *File > Rename....* A dialog opens.
3. Define the following: *New name*: the new name of the image or album.

4. Press **OK** to accept the change or **Cancel** to dismiss it.



Note: Do not type the file type extension. The image extension (i.e. type) cannot be changed. The original extension cannot be changed when the file name is renamed.

1.5 RECEIVING IMAGES VIA INFRARED FROM A COMPATIBLE DIGITAL CAMERA


1. Open the album where you want to save the received file.
2. Press **Images via infrared**. A dialog opens.
3. Select one of the following:

Receive in album: To receive the image and save it to a location you define.

Receive and mail: To receive the image and send it as an e-mail message.

Receive and fax: To receive the image and send it with the fax modem.

4. Press **OK**.

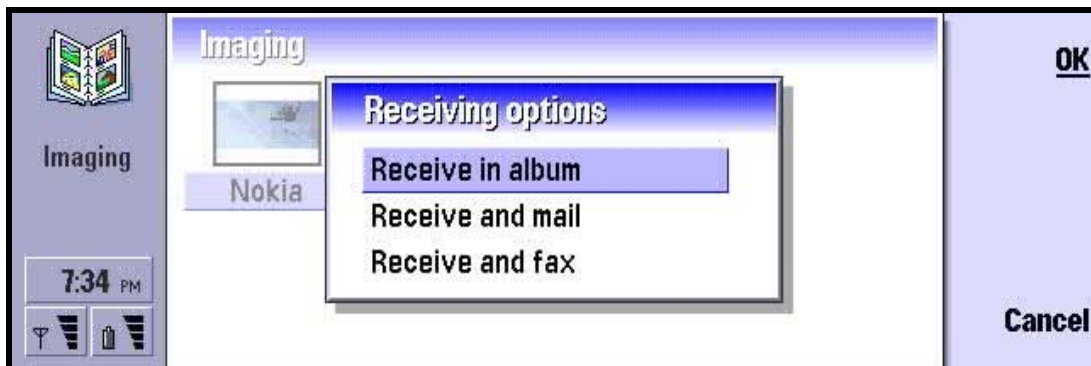

Activate image transfer from the camera. See the user's manual of your compatible digital camera for instructions.



Note: The camera has to support IrTran-P (Infrared transfer protocol)



Tip: If you are using a Concord Eye-Q Ir digital camera, it is possible to use the Nokia 9210 Communicator's memory card to save images in the camera, and then view the images on that memory card with the Nokia 9210 Communicator.

1.6 CONVERTING IMAGES

To convert an image manually to another format;

1. Open the image in Image viewer.
2. Press the Menu key, and select *File > Save as*.
3. Browse the location where you want to save the image and fill in a name for the converted image.
4. Press **Change format**.
5. Press **Change** to select a image format. Press **OK**.
6. Press **Close** .
7. Press **OK** .

1.7 SENDING IMAGES

To send images as mail attachments, for example;

1. Open the image in Image viewer.
2. Press the Menu key and choose *Send > as a mail*.
3. The mail message opens with the image as attachment.
4. Send the mail as described in the manual.

1.8 TROUBLESHOOTING

Q: The communicator cannot establish the connection with the compatible digital camera.

A: Check that the infrared port of the camera and the infrared port of the communicator are facing each other properly and that there is nothing between the infrared links to disturb the connection. Check also that your digital camera supports IrTran-P -protocol.

Q: I can't open the image with my PC.

A: You may have forgotten to convert the image to .JPEG format. Check the format and change it in the communicator if necessary.